




bruynzeel system



# FIXED/HINGED SCREEN FOR WINDOWS

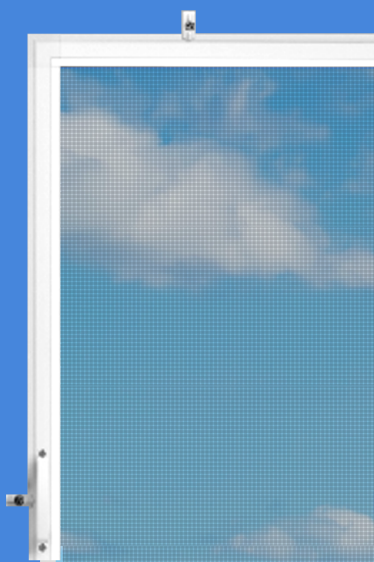








500 SERIES




INSTRUCTIONS

[www.flyscreen.com](http://www.flyscreen.com)

## Required tools

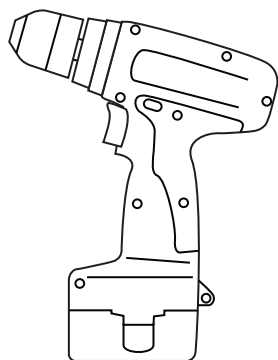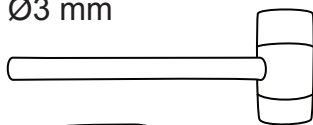

2x



2x



2x




80x100 cm 0x  
100x120 cm 1x  
120x150 cm 1x




80x100 cm 2x  
100x120 cm 4x  
120x150 cm 4x

White: RHZ551

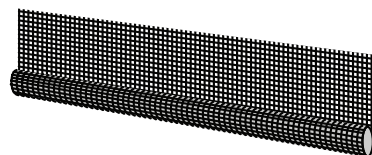

1x




White: RHZ552

Alu: RHZ501  
White: RHZ502


Alu: RHZ511  
White: RHZ512

Alu: RHZ521  
White: RHZ522

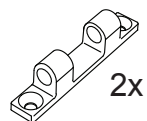


2x


White: RHZ553



2x



4x


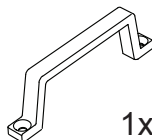


1x




2x

1

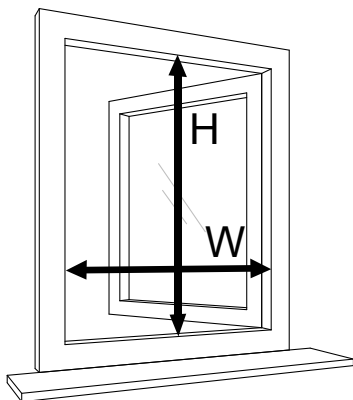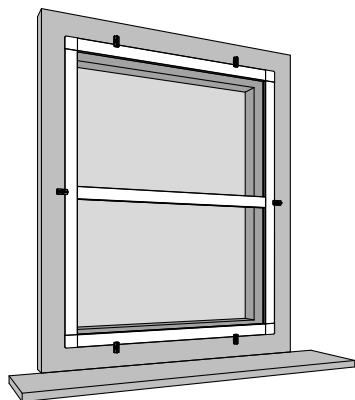


Manual assembly without hinges.


2

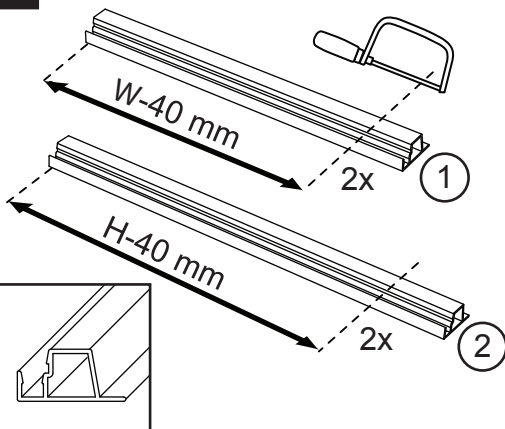


H is greater than 100 cm

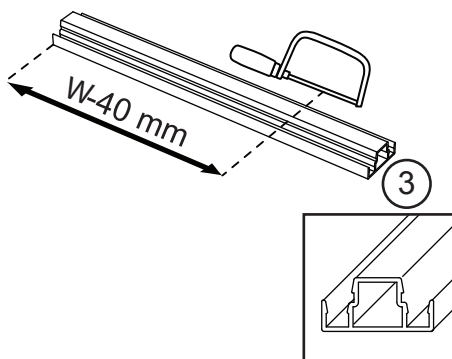


3

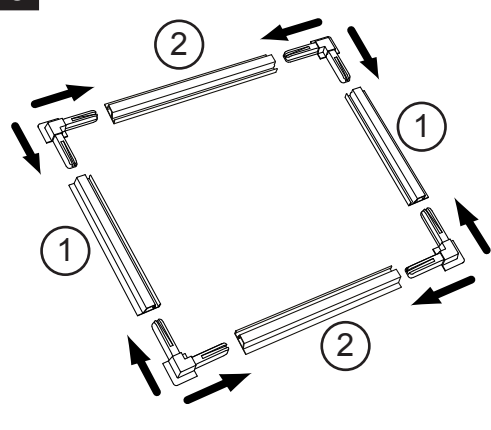


H is greater than 100 cm

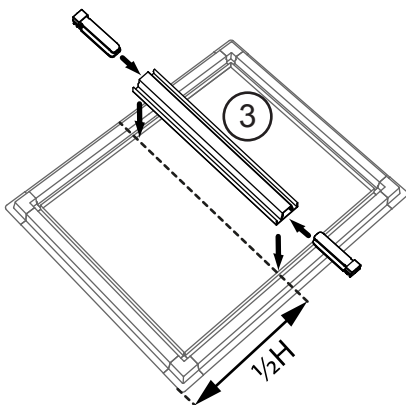

4

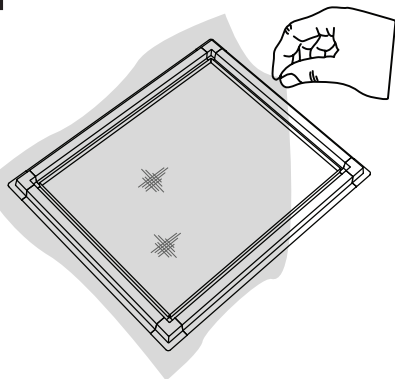


H is greater than 100 cm

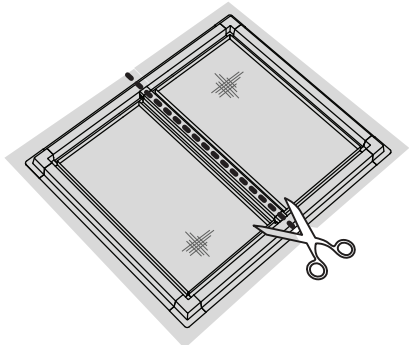


5

H is less than 100 cm

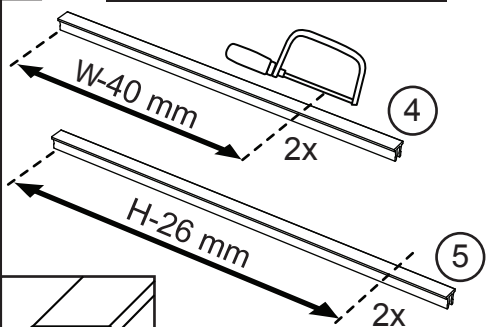


H is greater than 100 cm

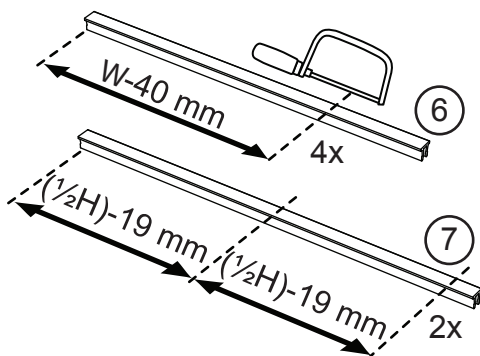


6

H is less than 100 cm

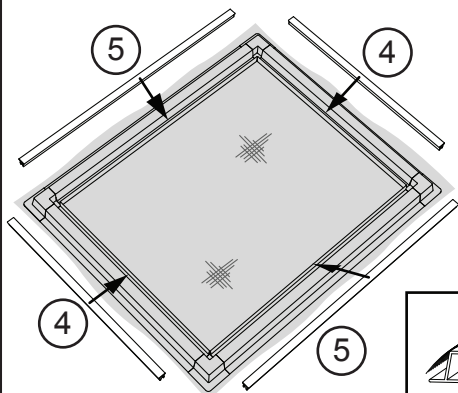


H is greater than 100 cm

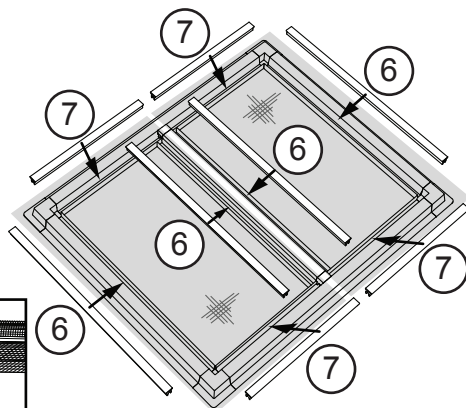






7

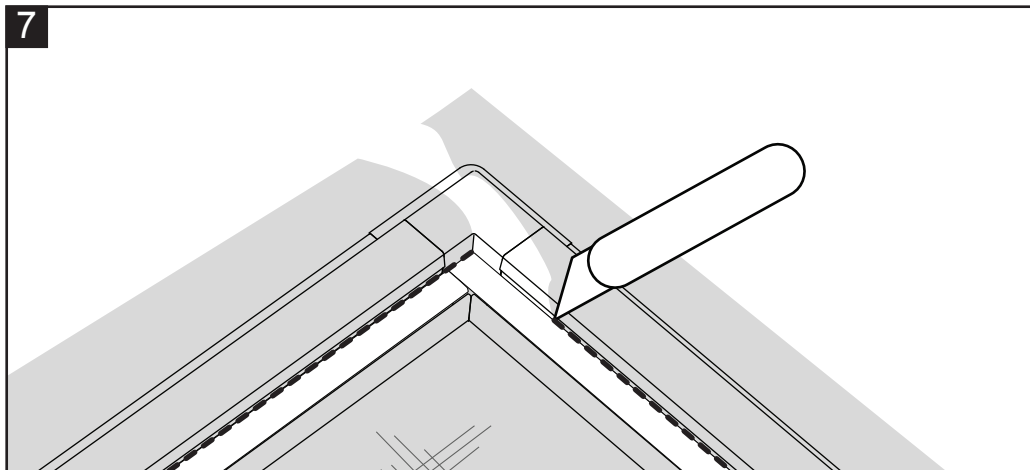

8

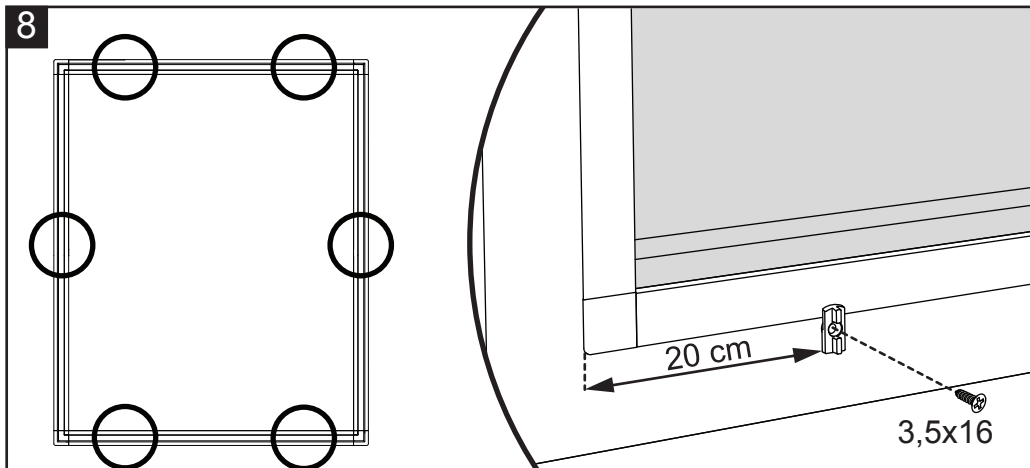


1

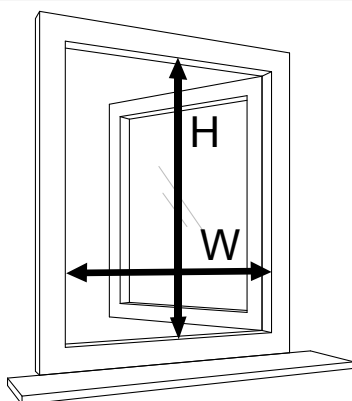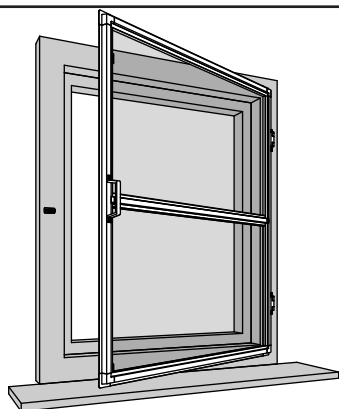


Instructions for assembly with hinges.


2

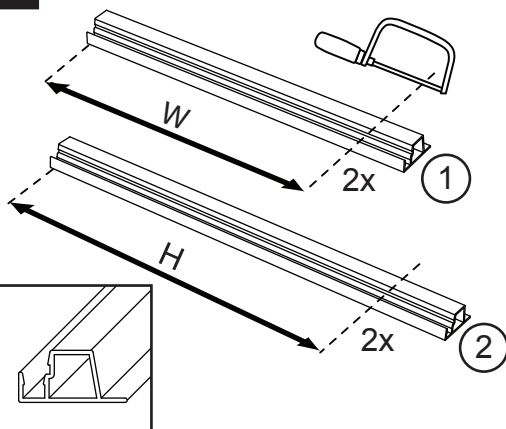


H is greater than 100 cm

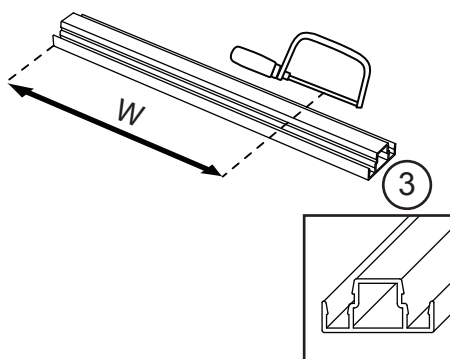


3

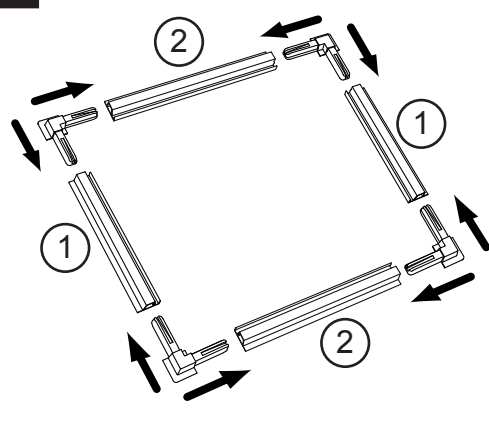


H is greater than 100 cm

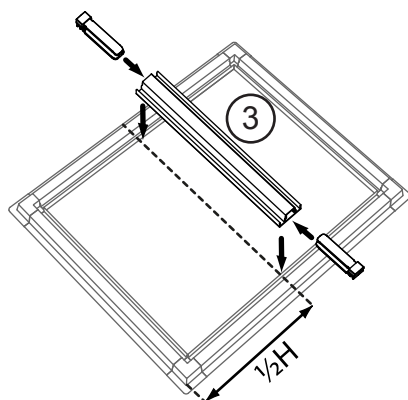

4

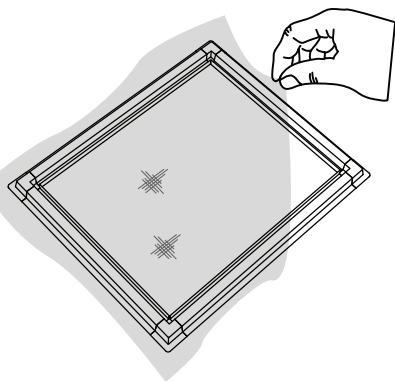


H is greater than 100 cm

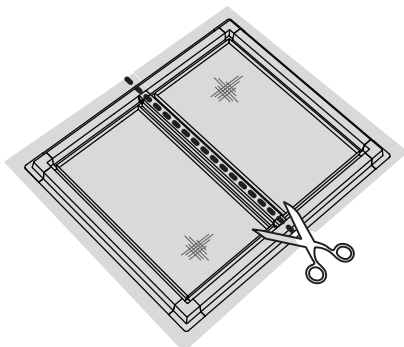


5

H is less than 100 cm

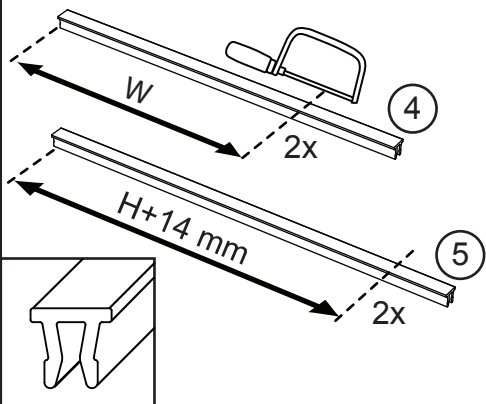


H is greater than 100 cm

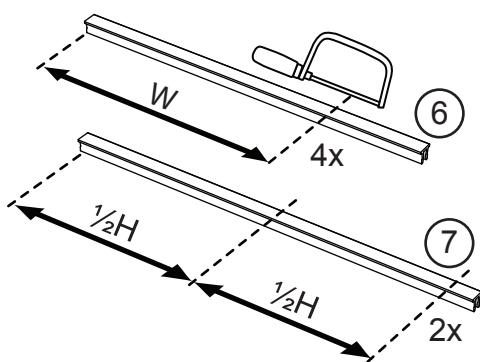


6


H is less than 100 cm

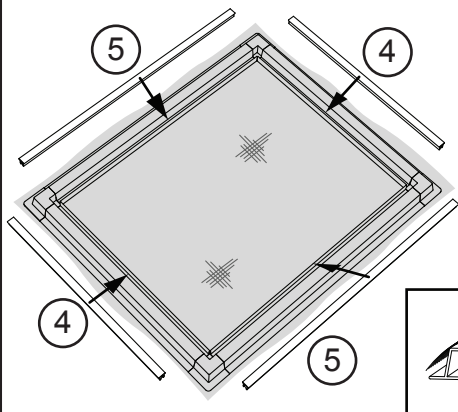


H is greater than 100 cm

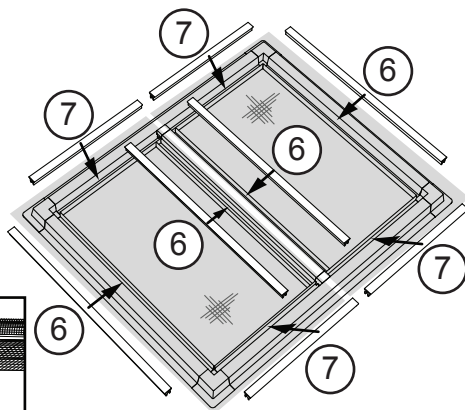

7

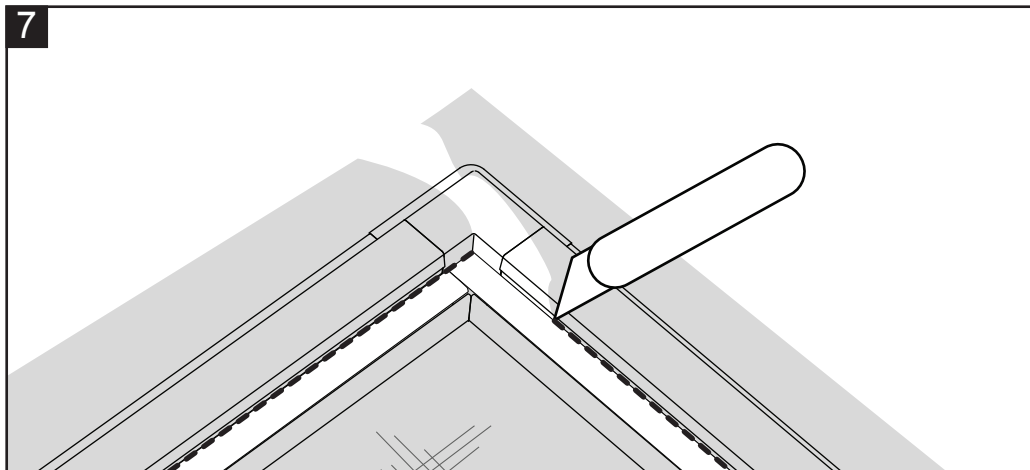

8

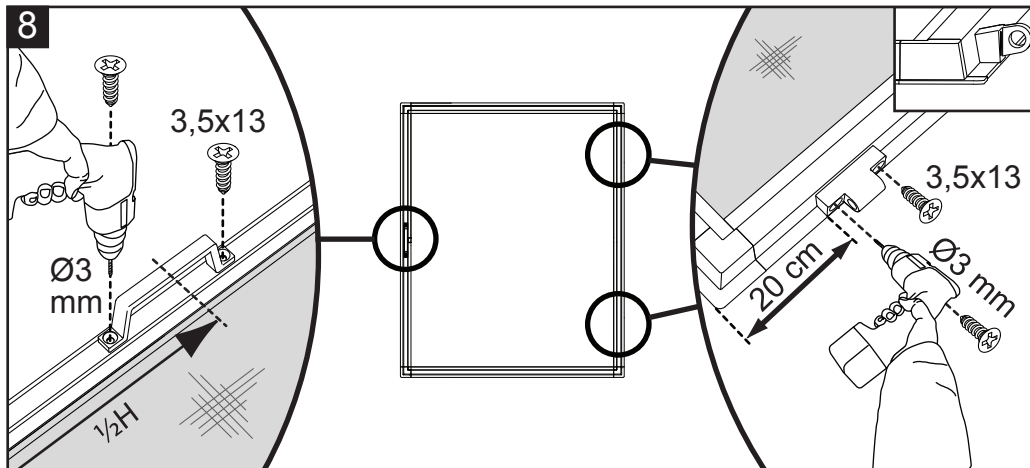

9

