

Domestic Screens for Windows



Keep insects out. Let fresh air in.

A simple, made-to-measure aluminium window screen designed for everyday use. Neat, practical, and easy to remove, it allows you to enjoy fresh air without the nuisance of insects entering your home.

Designed to fit either inside or outside your window frame (depending on how your window opens), this is a straightforward and cost-effective screening solution for a wide range of window types.

Why Choose This Screen?

A reliable, no-fuss solution for keeping insects out while maintaining airflow. Made to measure for a clean, secure fit, allowing your window to be used with minimal obstruction.

Simple to install, easy to maintain, and built to last.

Screen Options

Hinged Screen - Opens like a door using small hinges and turn buttons – ideal for regular access. With standard or T10 profile.

Lift-Out Screen - Sits securely in brackets and can be easily removed when needed.

Fixed Screen - A permanent solution, screw-fixed into position. With standard or T10 profile.

Product Details

- Powder-coated aluminium frame (white as standard)
- Optional midbar for additional support on larger screens
- Grey insect mesh as standard
- Made-to-measure or DIY kit options available
- Can be fitted inside or outside the window frame

Before You Order

Please ensure:

- You have enough flat surface around your window for the frame to sit against
- You have allowed space for any handles or fittings
- You have measured carefully – all screens are made to your supplied sizes

Turn over for the step-by-step measuring guide.



Top and Bracket for Lift-Out Screen



Turn Button



Magnetic Catch



Hinge

The Flyscreen Company Ltd, Unit 4, Warren Business Park, Knockdown, Tetbury, Gloucestershire, GL8 8QY

sales@flyscreen.com | 01454 238288 | www.flyscreen.com

Company Register: 3615661 | VAT: 741888897

Fly Screen Systems | Insect Mesh | Soffit & Ventilation Mesh | Chain Screens | Electric Fly Killers | Pest Control Options

September 2026

Domestic Screens for Windows



Measuring Instructions

Step 1: Measure the Opening

Measure the width and height of the window aperture, including any bevelled edges.

Step 2: Check Flat Surface

You will need 25mm of flat surface on each side for the frame to sit against.

If space is limited, a minimum of 10mm can work, but the frame will overlap slightly into the opening.



Step 3: Calculate Your Size

Add 50mm to both the width and height:

- Width = aperture + 50mm
- Height = aperture + 50mm

Allowing for Window Handles

If your handle protrudes more than 10mm, a subframe may be required.

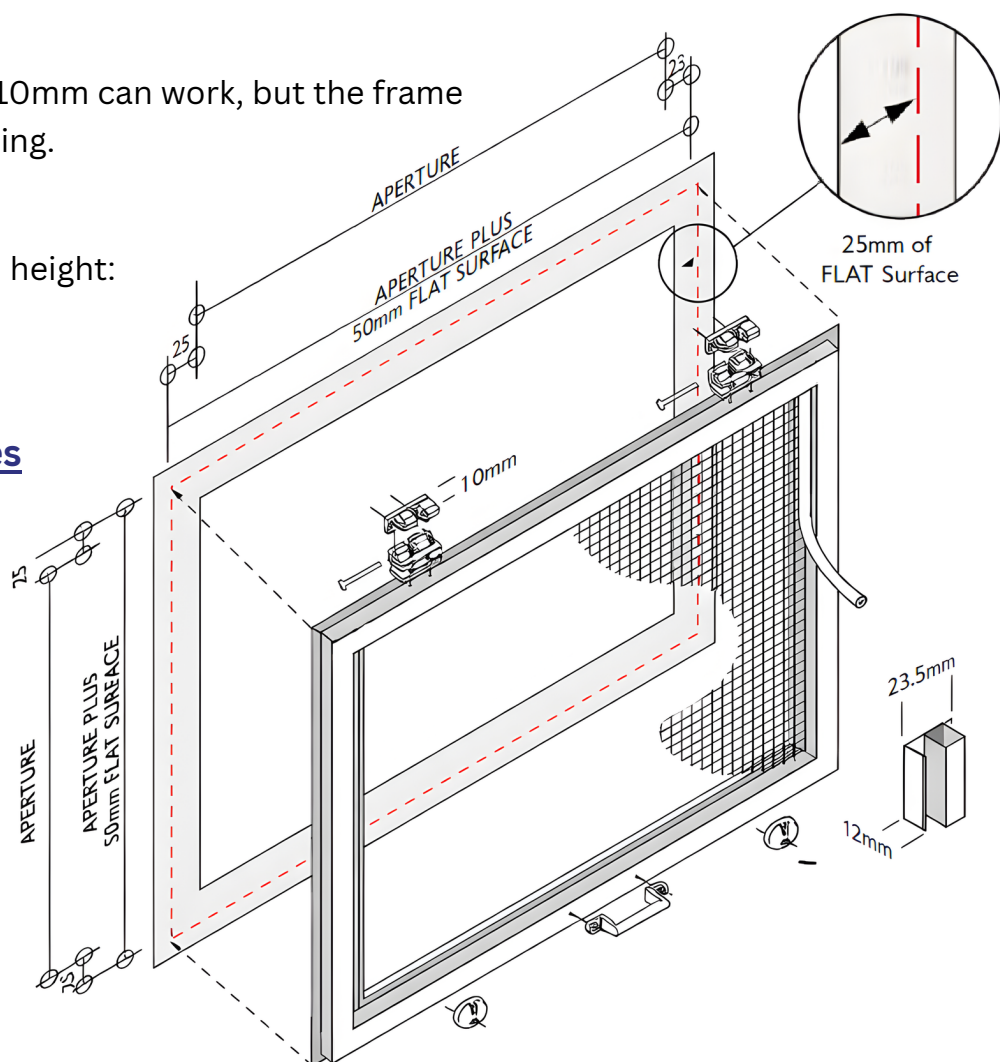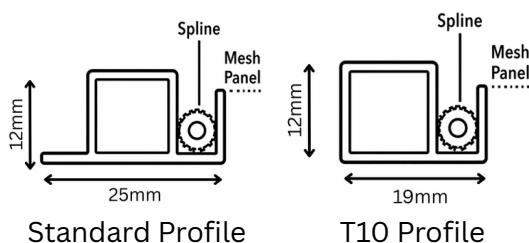

Important Notes

- Always measure in millimetres (mm) and provide sizes as width × height
- Include any bevelled edges in your measurements
- All screens are made to your measurements (±2mm tolerance applies), so it's important to measure carefully.
- No allowances or deductions are made by us
- Double check your measurements before ordering

The Flyscreen Company Ltd, Unit 4, Warren Business Park, Knockdown, Tetbury, Gloucestershire, GL8 8QY

sales@flyscreen.com | 01454 238288 | www.flyscreen.com

Company Register: 3615661 | VAT: 741888897

Fly Screen Systems | Insect Mesh | Soffit & Ventilation Mesh | Chain Screens | Electric Fly Killers | Pest Control Options

September 2026